


barpa



SERIES CETUS 600 - 24U

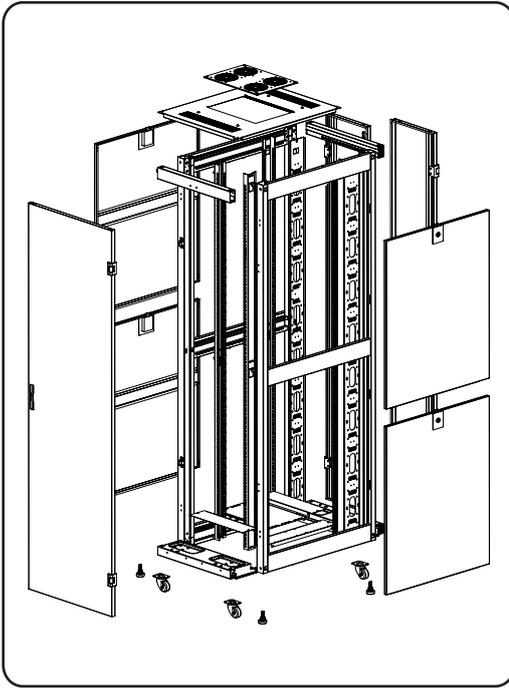


Safety warning – Do not climb on, rock, shake your rack. Only someone with good mechanical skill and who has experience should install this rack. Never exceed the maximum load capacity. If you didn't understand this instructions manual please contact us by info@barpa.eu

Required for installation		
		
Screwdriver	Adjustable wrench	Tape measure


SUPPLIED PARTS AND HARDWARE									
8x  M12X40 bolt	4x  M12 Adjustable feet	1x  Allen key	CABINETS INSTALLATION MANUAL	20x  M6	20x  M6x12	2x  One single door	2x  A double door	4x  Chain stopper	
12x  M6X15 bolt	4x  M6X12 bolt	16x  M5X10 bolt	6x  The key	8x  Plastic decorative cover					giveaways

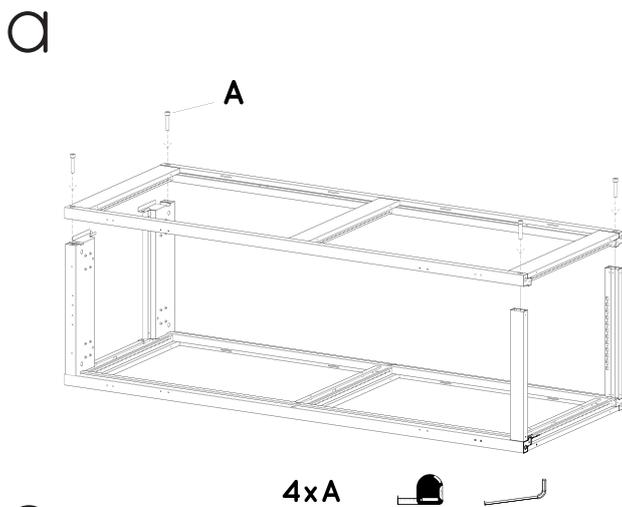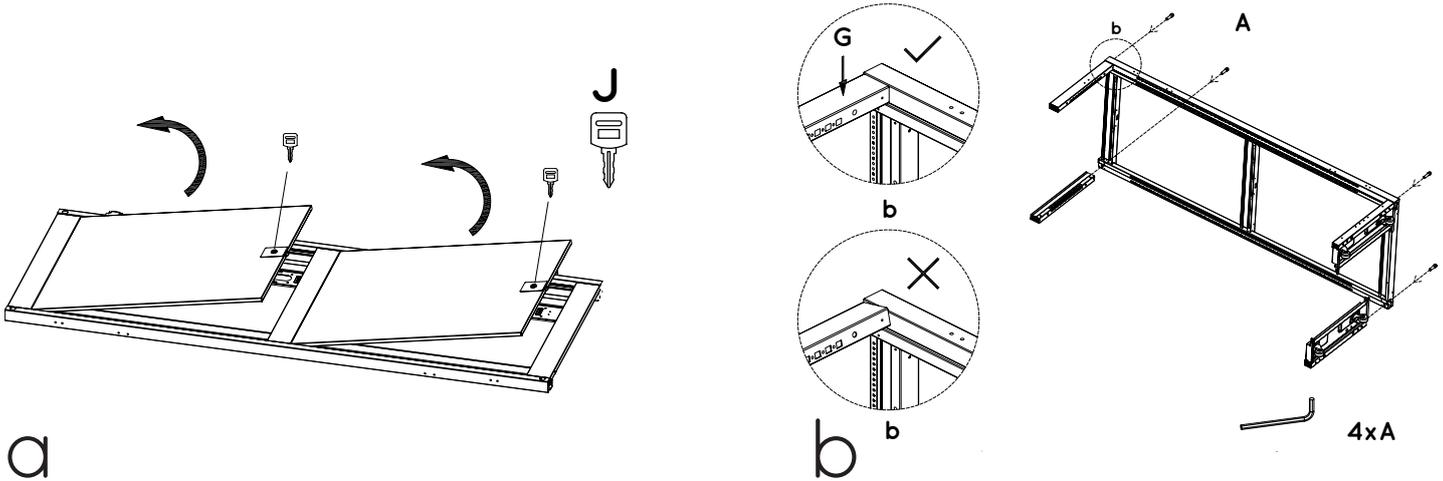

C
After assembling, if the diagonal framework is more than 4mm, it is required to loosen the bolts and then reassembled;

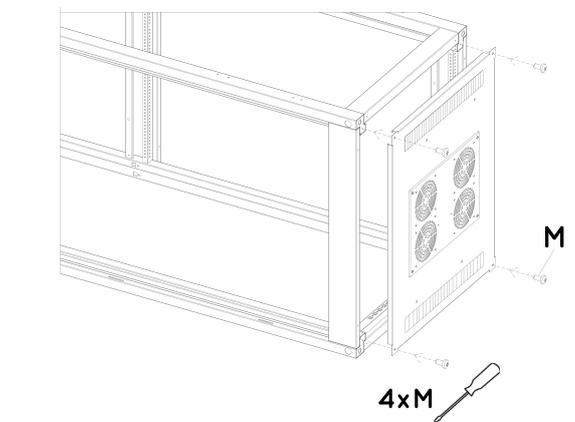


d
For the cabinet over 800 depth, the fans should be assembled closed to the rear door.

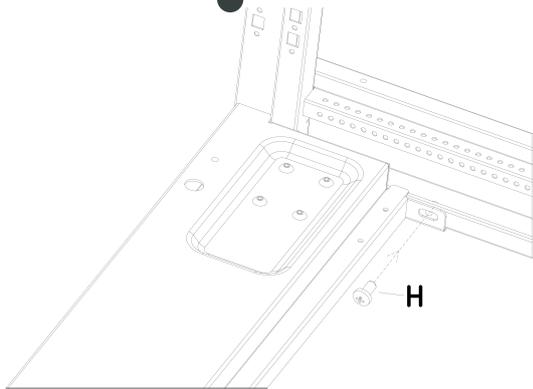

Cross recessed screw head		
Plum-shaped screw head		

4xH


e

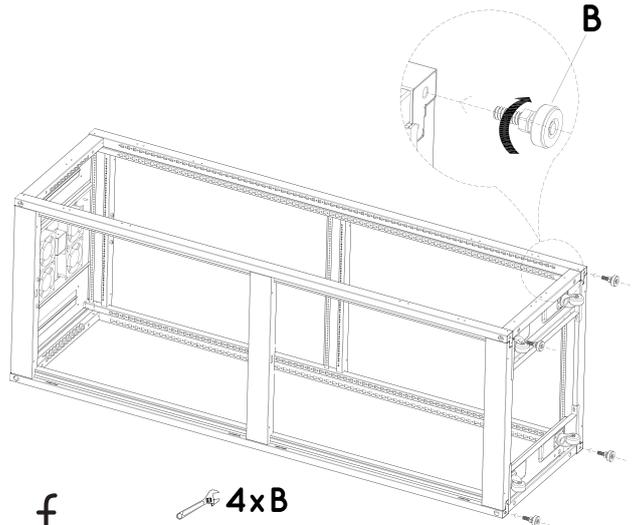

4xB

f


After assembling, the M12 feet should be under (shorter than) the castors in case of breaking when set up the cabinet!

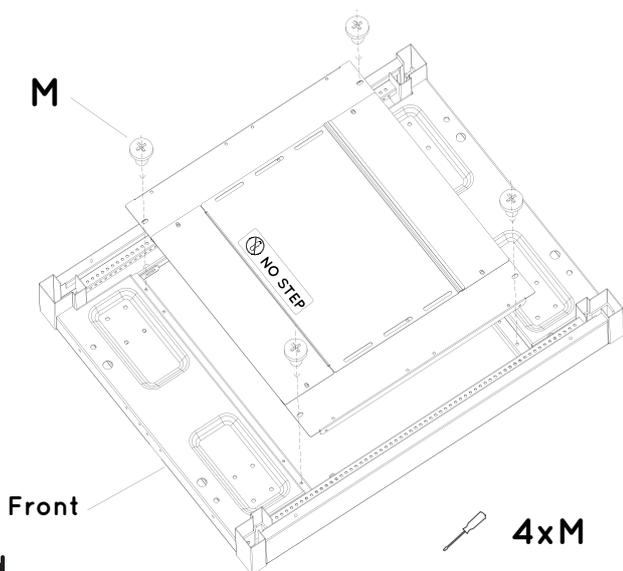

4xM

g


When assembled the "No Step" sticker is at the front of the cabinet.

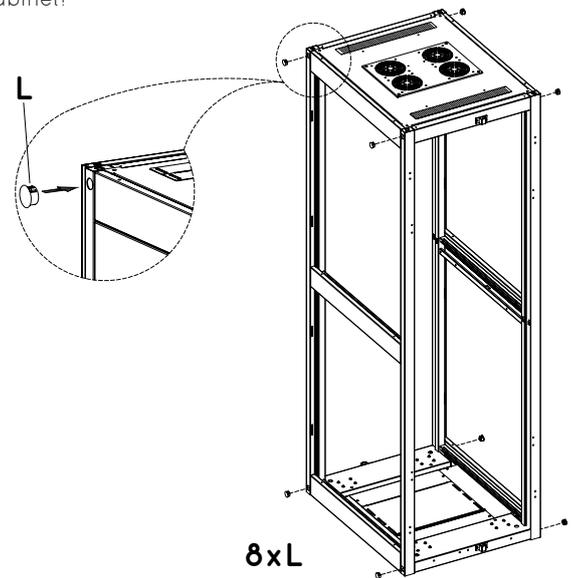

8xL


h

When assemble the whole frame, the plastic cover(L) should be removed.

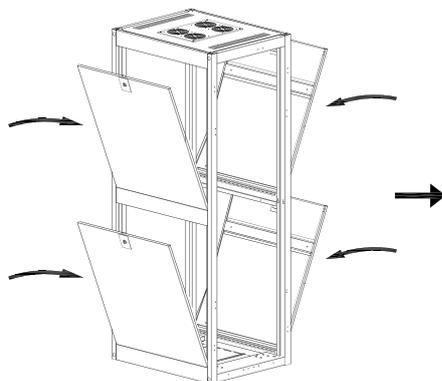

i

When assembling the side panels, it is necessary to lock the panels and remove the keys in case of falling down!

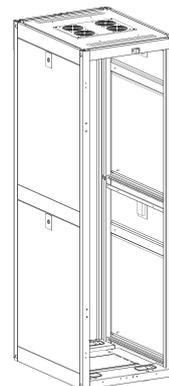









J

barpa

Single or double doors can be fitted front and rear - (Normally single door at the Front and double doors at the rear).

Fitting Single Door
 2 Hinges for 42U and smaller
 3 Hinges for 47U and taller

Fitting Double Door
 2 Hinges for 42U and smaller
 3 Hinges for 47U and taller

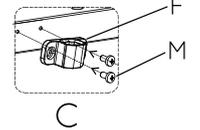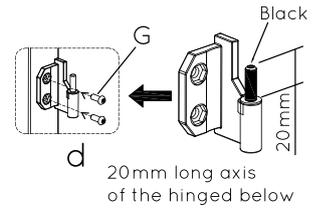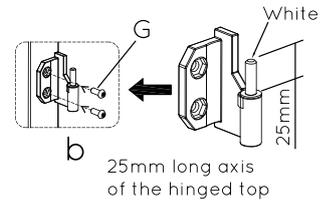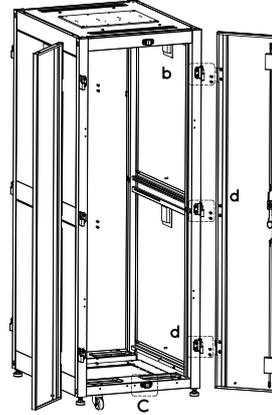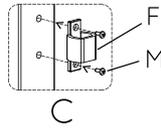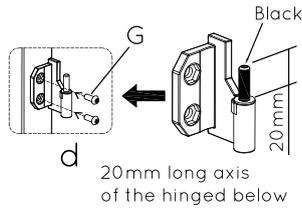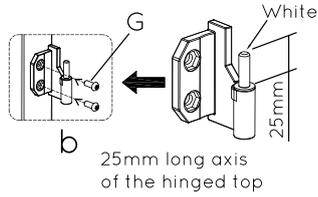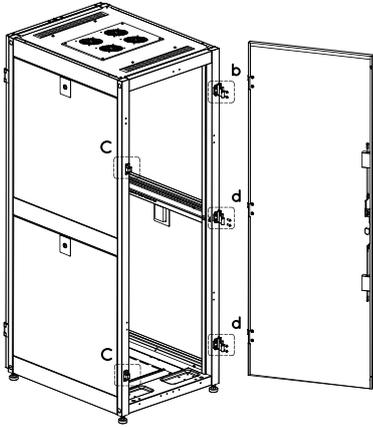


4xG, 2xF, 4xM

8xG, 2xF, 4xM



j

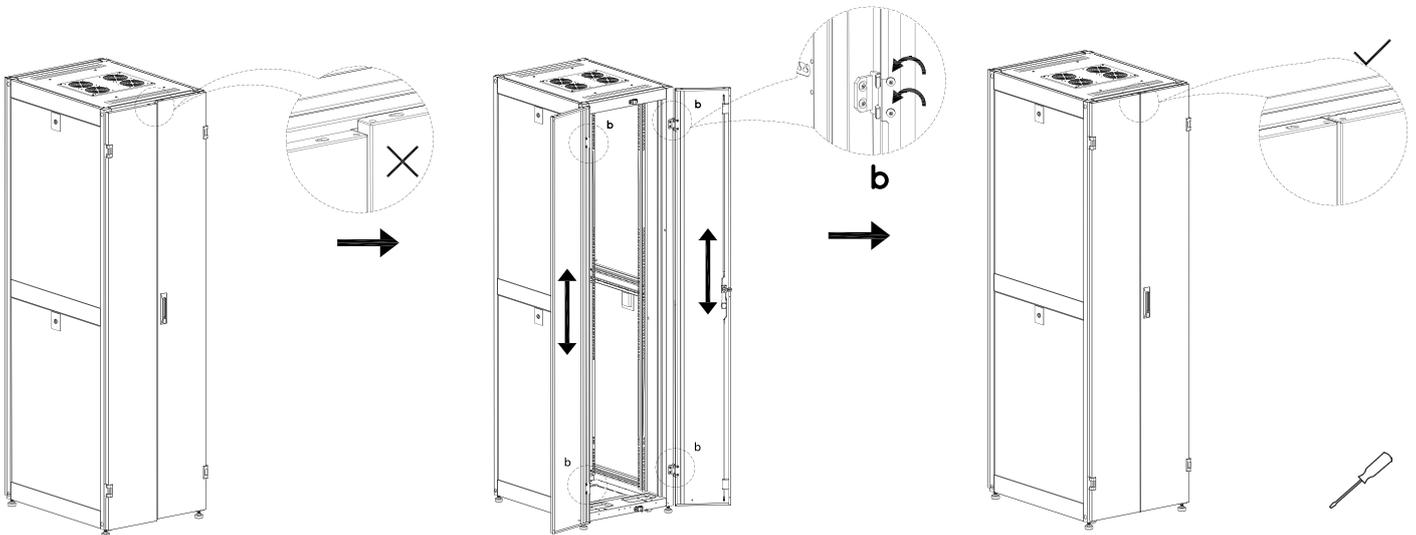

L

Doors can be adjusted by loosening hinge screws, moving the door and retighten.

You are ready to go!

Cautions: To avoid any damage please ensure that is adequate space between each unit for good airflow. Take care to not exceed the 40°C - 104°F temperature.

for more informations please go to www.barpa.eu