

INDEX

Introduction .....	2
Features .....	2
Product Type .....	3
View of Product.....	3
Front View .....	3
Rear View .....	3
Dimension .....	4
KVM Packing List .....	4
KVM Control Platform Connecting Wire .....	5
KVM Control Platform Power Wire .....	6
Operation .....	6
Before Use .....	6
During Use .....	6
After Use .....	6
Hot Plug .....	6
Power On/Off and Reboot .....	7
Assembling & Disassembling .....	7
Standard rack Installation .....	8
Single Stage Installation .....	9
Cascade Installation .....	10
OSD Operation .....	10
OSD Overview .....	10
OSD Navigation .....	11
OSD Main Screen Headings .....	11
OSD Functions .....	12
Safe Guide .....	14



## INTRODUCTION

KVM control platform is one which integrate a multiple ports KVM switch into 1U height. It controls multiple computers with one platform (keyboard, mouse and monitor).

A KVM switch can control 4/8/16 PC by direct connection and it can control 256 PC at most by 2 level cascade connection.

It is easy and quick to install. Just connect the wire to the correct port without software configuration. So there is no difficulty in installation and incompatibility.

KVM switch provides two methods to control the computers connected to it:

1. By keyboard combine key.
2. By OSD operation.

In addition, it provides powerful automatic scanning function to scan and monitor all computers connected to it.

Using KVM control platform is a best choice to save time and money. By using one KVM platform to manage all the computers connected to it, user can save money for keyboard, mouse and monitor for each computer and their space.

## FEATURES

### Control Platform

- Control platform with LCD, keyboard, mouse and multiple ports KVM switch;
- 1U height, suitable for 19" standard cabinet installation and metal structure.
- Control platform can be totally pulled out from the cabinet and the LCD screen can be turned on to 120 degrees;
- Ultra thin keyboard with keypad;
- Front panel with lock to prevent damage by accident.
- Extra Power adapter.
- Automatic power on/off.
- An easy to use OSD menu


### Switch

- One control platform can control 4/ 8/16 computers by direct connection.
- One control platform can control 256 computers by 2 level cascade connection.
- Be compatible with PS/2, USB standard interface.
- Support VGA, SVGA, XGA video input.
- Accord with DDC, DDC2, DDC2B standard and VESA standard
- Support maximum resolution of 1920 \* 1080
- Support multiple operating systems: WIN95/98/98SE/ME/200X/XP/WIN7/NT, UNIX, LINUX.

Type	OSD Function	Note
KVM Switch VGA 17" LCD 1 Port	No	17 inches LCD screen, keyboard and mouse.
KVM Switch VGA 17" LCD 8 Ports	Yes	17 inches LCD screen, keyboard, mouse and 8 ports.


## VISTA FRONTAL

1. Handle
2. Lock
3. Front Panel
4. LCD Screen
5. Rear Hang Ear Channel
6. LCD OSD Control Key
7. Front Hang Ear
8. Mouse Touch Board
9. Guide
10. Lock Hole

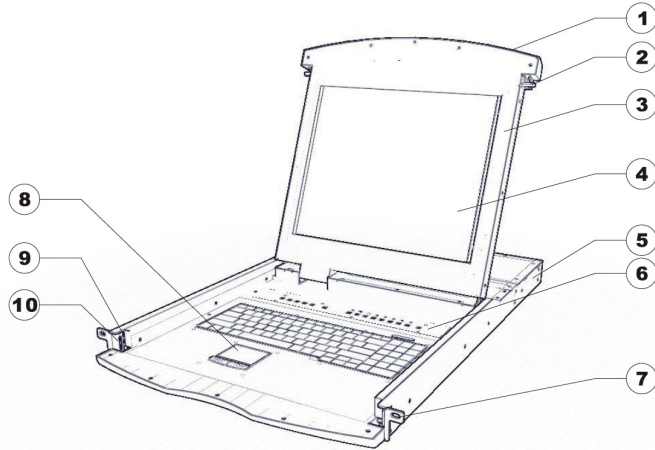


## REAR VIEW

82371117010 (with IP module- 82372010000)



82371117080 (with IP module- 82372010000)



1 2 3 4 5

6

### 1. IP Module Restore to Default

Plug needle or ballpoint pen into the hole to restore the IP module to default setting.

## 2. RJ45 Port

CAT UTP can be plugged into it to be connected to the LAN including the controlling computer.

## 3. IP Module Reset

If the IP module has no responding, plug needle or ballpoint pen into the hole to reset it.

## 4. Power Jack

The DC 9V~12V power supply cable plugs into this jack.

## 5. USB Port


Ports to plug in your USB keyboard and mouse are found here.

## 6. Computer Port

Port to connect computer.

**Note: For operation of IP Module, please refer to the related user manuals.**

## DIMENSION (mm)

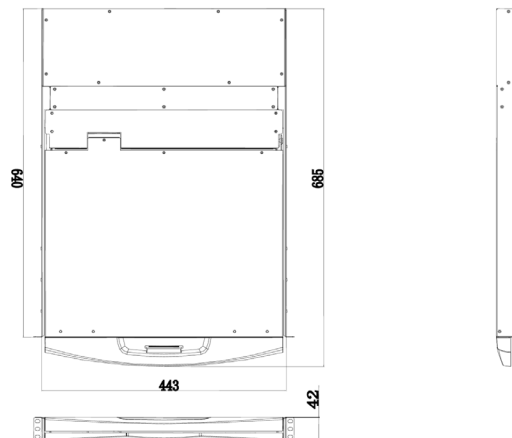

17 inch


## PACKING-LIST

Type	Name	Unit	Note
8237117***	KVM Control Platform	1	17 inches LCD screen, keyboard and mouse control platform integrated KVM switch with multiple ports (4/8 ports).
Cable	KVM Connecting Cable	1/4/8/16	PS/2 Connecting and USB Connecting
AC Power	Power Cable	1	AC power connecting cable
KVM Control User Manual		1	

Please check the lists carefully and contact with your dealer if you have some problems. Please read the manual carefully before installation. In case of any problem please contact [info@barpa.eu](mailto:info@barpa.eu).

## KVM CONTROL PLATFORM CONNECTING WIRE


Cable Type	Applicable Type	KVM Port	PC or Server Port
USB and PS/2 Connecting Cable	All types	VGA port (Keyboard, mouse and monitor)	VGA, Keyboard, Mouse (Standard USB & PS/2 Interface)

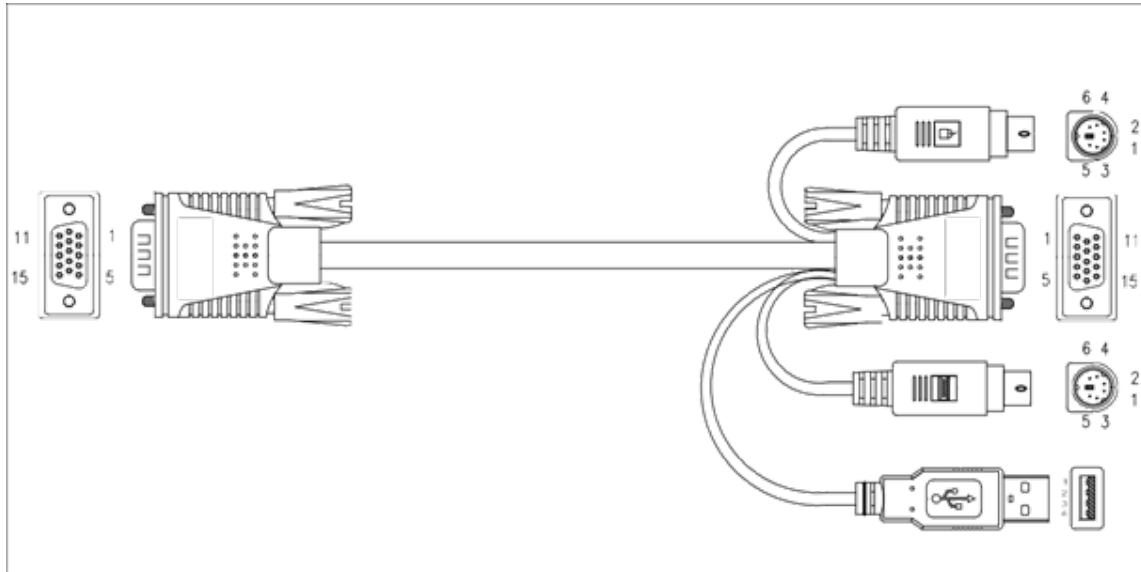

USB and PS/2 Connecting Cable

## KVM CONTROL PLATFORM POWER WIRE

Wire Type	Note	Voltage Range	Machine Type
AC Power Wire	3 Plugs	100~240V	All

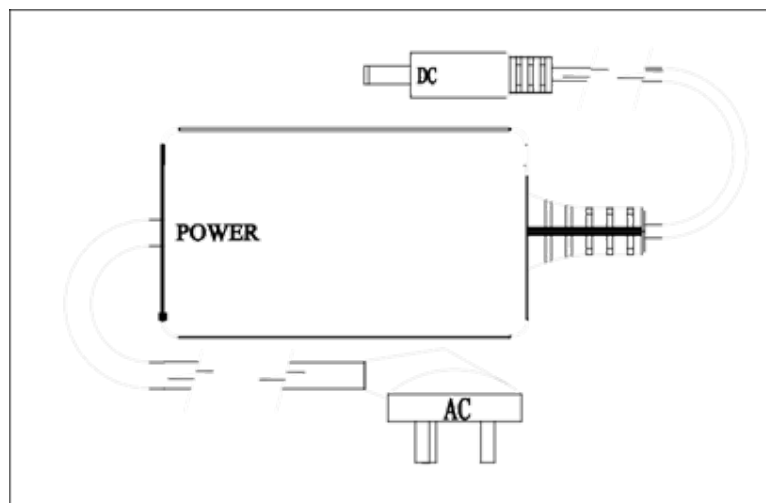

AC Power Wire


## OPERATION

### Before Use


Make sure all the devices are safely grounded.  
Make sure the KVM wire and power wire are connected correctly.

### During Use

Pull the KVM control platform out from cabinet totally, the guide locks automatically and the power turns on. Release front lock. As shown below:

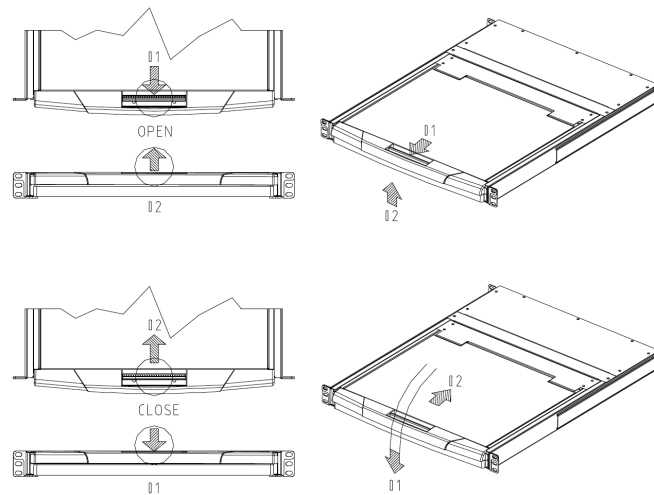

Then open the front panel and the LCD can be turn on to 120 degrees. As shown below:

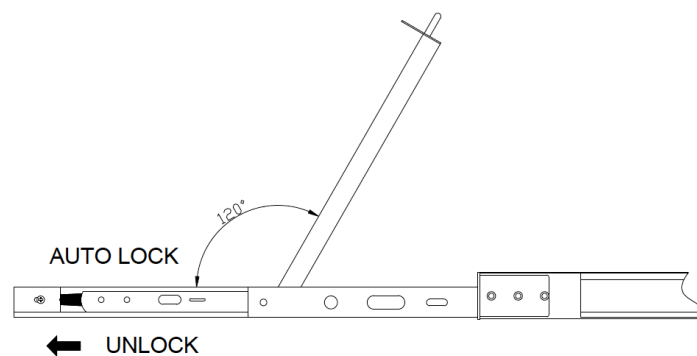

Press LCD power key (red), the LCD is on.

### After Use

- Press LCD power key, the LCD is power off.
- Close LCD panel and lock the front panel.
- Release guide lock.
- Push the control panel into the cabinet totally, and then it is power off.



### Hot Plug

The KVM control platform supports hot plug. It can be connected and disconnected without power off. Please follow the steps

Hot plug PC connecting port:

1. The connecting wire must be plugged into the port from which it is pulled out.
2. Plug the mouse before the keyboard.

### Power On/Off and Reboot

Power on:


1. Connect the computers to the KVM switch;
2. Power on the KVM switch;
3. Power on the computers.

Reboot:

If the KVM switch does not respond, just press the reset button on the panel.


### ASSEMBLING & DISASSEMBLING

The device can be assembled and disassembled as following.

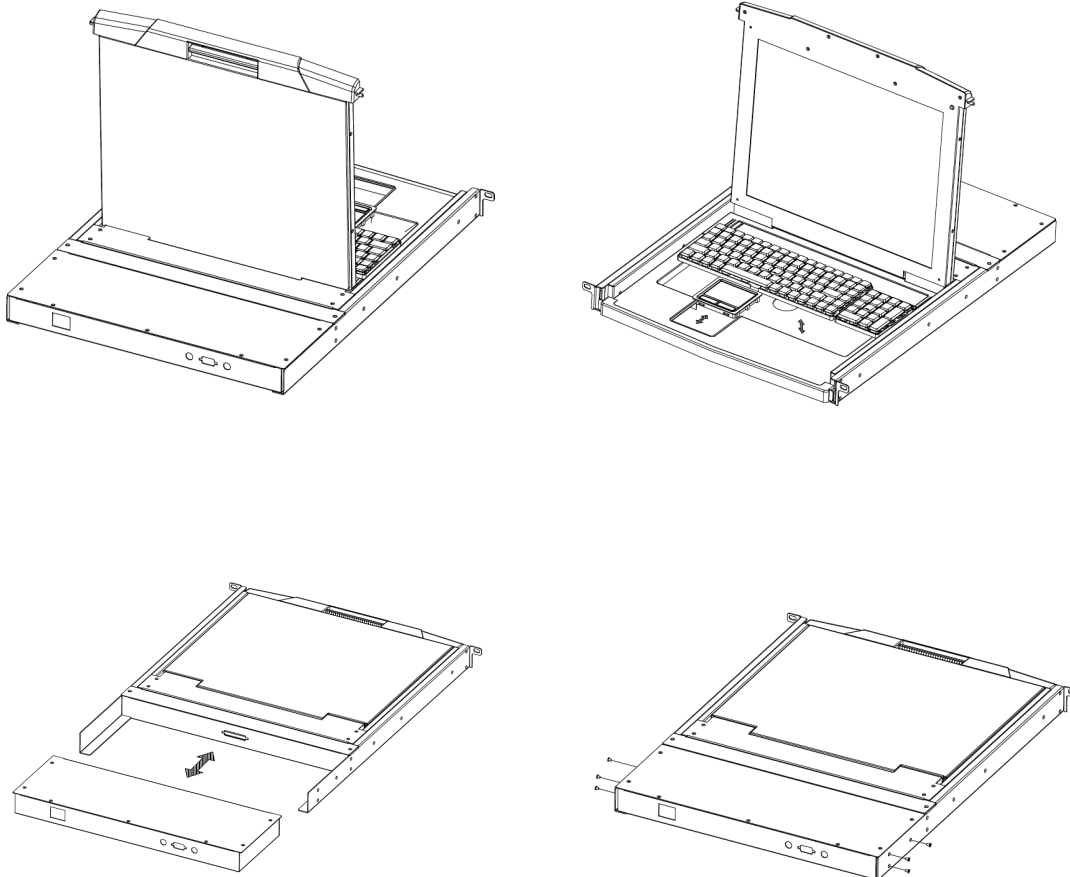


## INSTALLATION


1. Screw the front flange to the rack first. Slide the bars with the rear flange towards the rack until the flanges make contact with the rack, then screw the rear flanges to the rack.

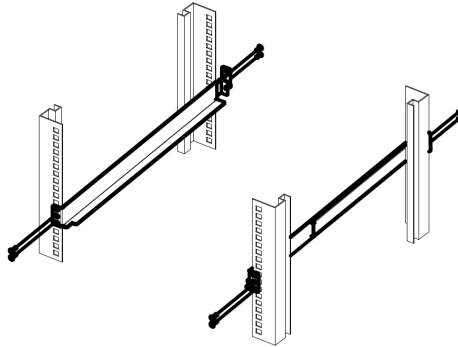

2. Slide the switch onto the support flanges. Use the screws supplied with this package to loosely attach the front of the switch to the front of the rack.

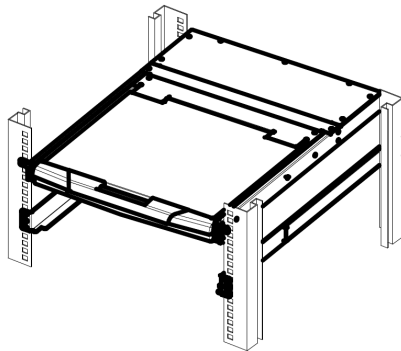

3. Slide the rear attachment sliding brackets along the slide bars until they contact the rear of the switch.

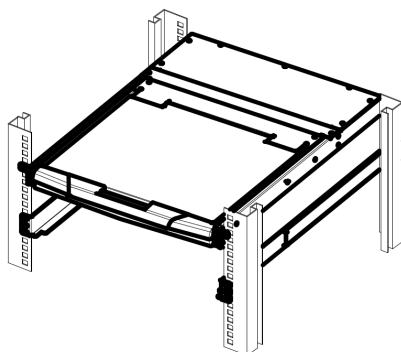




## SINGLE STAGE INSTALLATION

To set up your installation, do the following:

1. Plug your USB / PS/2 keyboard, USB / PS/2 mouse and monitor into the console port section located on the unit's rear panel.
2. Using a KVM cable set, plug the DB 15 connector into any available CPU port on the switch.
3. At the other end of the cable, plug the keyboard, mouse, video cables into their respective ports on the computer.
4. Plug the power adapter cable into the switch's power jack, then plug the power adapter into an AC power source.
5. Repeat step 2-4 for any other computers you are connecting up.

This completes the single stage installation, and you can turn on the power to the computers.

NOTE: The LCD KVM switch initially links to computer connected to the first CPU port.

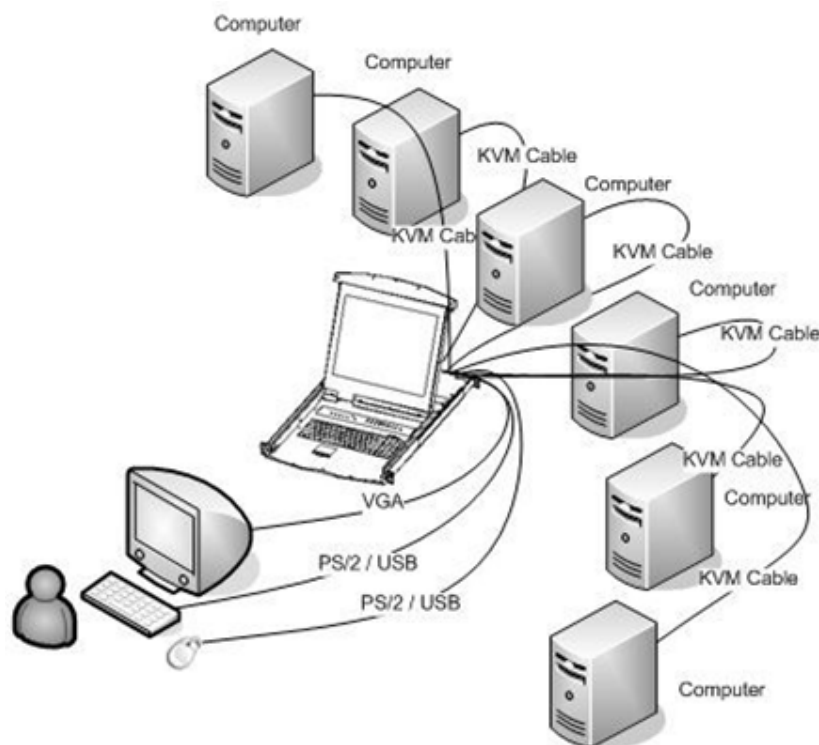


## CASCADE INSTALLATION

To set up cascade installation, do the following:

1. Set up single installation as mentioned in SINGLE STAGE INSTALLATION.
2. Connect one end of HDB15 cable to IN port of upper KVM, and the other end to OUT port of lower KVM

This completes the cascade installation, and you can turn on the power to the computers

NOTE: The LCD KVM switch initially links to computer connected to the first CPU port.

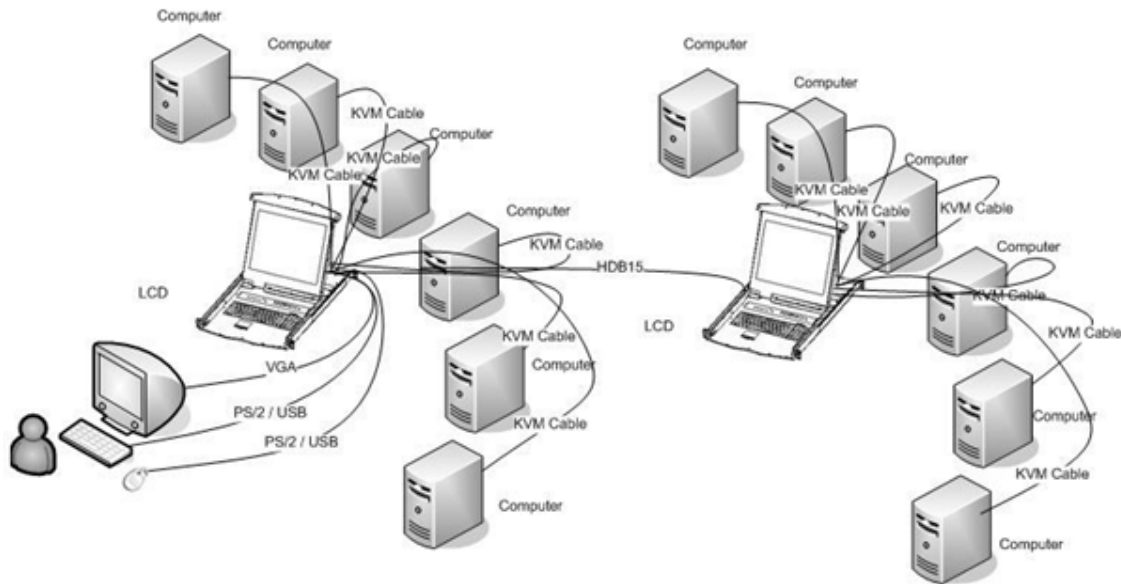

## OSD OPERATION


The On Screen Display (OSD) is used to handle all computer control and switching procedures. All procedures start from the OSD main menu. To pop up the main menu, tap the [Ctrl] twice.

If OSD menu is set as “console locked”, you must input password each time the main menu appears.

If no password has been set, just press [Enter] to show main menu.

Note: There are two passwords in OSD. One is user password which is initially empty. And the other is supervisor password which is “admin”.

OSD menu interface is shown as below:

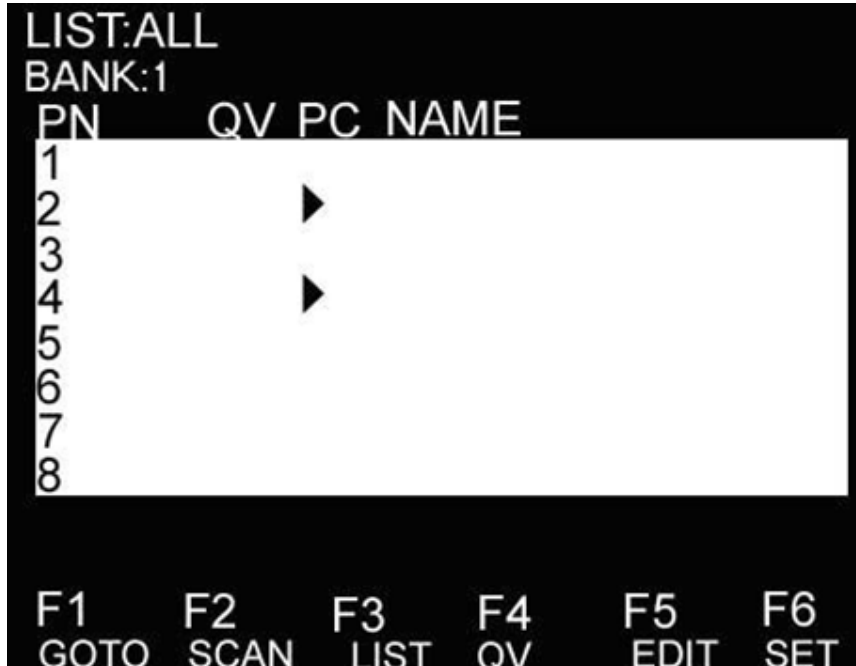

Note: OSD always starts in List View, with the highlight bar at the same position it was in the last time it was closed.

### OSD NAVIGATION

To dismiss OSD, press [Esc].

To move up and down through the list one line at a time, use the Up and Down Arrow Keys. If there are more list entries than what can appear on the main screen, the screen will scroll.

To activate a port, move the highlight bar to it then press [Enter].

After selecting a port, the OSD menu automatically disappear and a blue tip window appears to indicate the port currently selected.

### OSD MAIN SCREEN HEADINGS

Heading	Explanation
PN	This column lists the port numbers for all the CPU ports on the installation. The simplest method to access a particular computer is to move the highlight bar to it, then press [Enter].
QV	If a port has been selected for Quick View scanning, an arrowhead symbol displays in this column to indicate so.
PC	The computers that are powered on and are on line have an arrowhead symbol in this column to indicate so.
NAME	If a port has been given a name, its name appears in this column.



## OSD FUNCTIONS

OSD functions are used to configure and control the OSD. For example, you can: rapidly switch to any port; scan selected ports only; limit the list you wish to view; designate a port as a Quick View Port; create or edit a port name; or make OSD setting adjustments.

### F1 GOTO:

GOTO allows you to switch directly to a port either by keying in the port's name or its port number.

To use NAME method, move highlight bar to "NAME", press [Enter], input name of a port, then press [Enter] to confirm.

To use PN method, move highlight bar to "PN", press [Enter], input port number, then press [Enter] to switch. If the port number is invalid, it will remind the user to input again.

To switch to other BANK, move highlight bar to "BANK", press [Enter], input bank number, then press [Enter] to switch to the specified bank. If the bank is invalid, it will remind the user to input again.

Note: When keying name, if there is a matching name, the matched name will appear on the screen, just press [Enter] to switch to that port.

To return to main menu, press [Esc].

### F2 SCAN

The SCAN function can automatically scan from current selected port, the scan interval can be set by users. When scanning, a small window on the screen indicates the current port number. Press [Space] to stop scanning, and the KVM switches to the port last scanned.

### F3 LIST

The LIST function lets you broaden or narrow the scope of which ports the OSD displays on the main screen.

Many of the OSD functions only operate on the computers that have been selected for listing on the main screen with this function. The choices and their meanings are given in the table below:

Choice	Meaning
ALL	Lists all of the ports on the installation.
QVIEW	Lists only the ports that have been selected as Quick View Ports.
POWERED ON	Lists only the ports that have their attached computers powered on.
POWERED ON + QVIEW	Lists only the ports that have their attached computers powered on and have been selected as Quick View Ports.
QVIEW + NAME	Lists only the ports that have been selected as Quick View Ports and have name.
NAME	Lists only the ports that have names.



Move the highlight bar to the choice you want, then press [enter]. An icon appears before the choice to indicate that it is the currently selected one.

After you make your choice and press [Enter], you return to the OSD main screen with the newly formulated list displayed

#### F4 QV

QV function can select port as Quick View. Move the highlight bar to a port, press [F4], an icon of up triangle appears. Press [F4] again, the icon disappears

#### F5 EDIT

EDIT function creates or edits the name of a port. Press [F5], a pink edit box will appear on the screen. Input name, and then press [Enter], the port is set a name and it will also appear on the screen.

#### F6 SET

SET function configures the OSD menu. Move the highlight bar to an option, press [Enter] to enter a setting option.

CHANNEL DISPLAY MODE: Mode of small tip window

Choices and meanings are below:

Choice	Meaning
PN + NAME	Tip window displays port number and port name.
PN	Tip window displays port number.
NAME	Tip window displays port name.

Move the highlight bar to an option and press [Enter] to select it.

CHANNEL DISPLAY DURATION: Time the tip window last.

Options are following:

- 3 SECOND The tip window lasts for 3seconds.
- ALWAYS ON The tip window always on the screen.

Move the highlight bar to an option and press [Enter] to select it

CHANNEL DISPLAY POSITION: Position of the tip window.

A small blue window appears on the screen. Use arrow key to move it, then press [Enter] to specify the position.

SCAN DURATION: Duration for scanning one port

Options are 3 seconds, 5 seconds, 10 seconds, 15 seconds, 20 seconds, 30 seconds, 40 seconds, 60 seconds. Move the highlight bar to an option and press [Enter] to select it.

OSD ACTIVATING HOTKEY: Select OSD activating hotkey

- [Ctrl] [Ctrl] Set hotkey as [Ctrl] [Ctrl].
- [Scroll] [Scroll] Set hotkey as [Scroll] [Scroll].
- [Shift] [Shift] Set hotkey as [Shift] [Shift].
- [Alt] [Alt] Set hotkey as [Alt] [Alt].

Move the highlight bar to an option and press [Enter] to select it.



**SET PASSWORD:** Set new password.

First enter old password, then enter new password and confirm it. The new password is set. If error occurs, the screen will remind users.

**CLEAR THE NAME LIST:** Clear the names of port list.

You need to enter password to clear the names of port list.

**RESTORE DEFAULT VALUE:** Restore settings to default value.

You need to enter password to Restore settings to default value.

Note: The user password will also be cleared, and the factory password will not.

**LOCK CONSOLE:** Lock the console.

You cannot switch or scan after you lock the console (including switch by push button on the panel or OSD). You need to enter password to set.

Note: After Locking the console, you can also unlock the console by this option. It also needs password verification.

### **SAFE GUIDE**

- Please follow the directions below when installing, using and maintaining it in order to guarantee the device to work well.
- When installing and operating the device, please make sure proper power supply first, and then do other operations after it is initialized.
- As signal and power transfer need custom cable, please use matched cable, unmatched cable may cause system work improperly or even damage the device.
- Keep airy during operating to prevent high temperature.
- Keep the device away from working long in wet environment to prevent short circuit.
- Please do not open the device without permission of professionals.

